

8. ERROR INDICATION MODE (LED)

- On error occurrence, LED of water pressure/air dryer is blinking and buzzer will be ringing. There are No. 1 to 8 errors, and details are as follows.

No	Number of buzzer ringing	Errors and problems	Indication or cancellation method
1	1	No water. (Full water level is not detected while water incoming.) Full water level is not detected after 2 minutes of water supply.	- Error will occur when the sensor does not sense the water filling while the water supply valve is opened for 2 minutes. Water supply valve will be closed and error indication will be continued when the water filling level is not sensed even though the water supply valve was opened for 3 minutes. - Number 1 will be repeated and it will automatically cancel function, even though the remote control, main body is controlled or there was a seating sensed. - It will be turned into waiting mode when the causing factor is removed.
2	2	Water leakage error Error will occur when water level is decreasing and filling in repetition more than 7 times for 3 minutes.	- Repetitive Error signal - All the functions will stop - Error will disappear when power is supplied again.
3	3	Seating temperature is over heated Error will occur when the seat is hotter than 51°C for at least 2 seconds.	- All the functions will stop. Error will be displayed. - Error will disappear when power is supplied again.
4	4	Temperature thermistor is over heated. Error will occur when the temperature of water outlet is sensed(T2) higher than 45°C and nozzle cleaning will be automatically done to supply water. (Water supply will stop on a certain temperature that was set)	- All the functions will stop. Error will be displayed. - Error will disappear when power is supplied again. - If the temperature is higher than 45°C on either T1 or T2, nozzle self cleaning will be operated and there will be water supply to prevent from temperature raising.
5	5	Warm water heater is not working. Warm water temperature is not changing when the water outlet sensor (T2) was performed for a while, even though warm water temperature was set to stop. (1°C within 3 minutes) But, it only applies when the temperature of T2 is below 25°C	- Cleansing or bidet function will stop. - Repetitive Error signal - Error will disappear when power is supplied again.
6	6	Warm water themistor #1 open/short Warm water themistor #2 open/short	- All the functions will stop. Error will be displayed. - Error will disappear when power is supplied again.
7	7	Seat thermistor open/short	- All the functions will stop. Error will be displayed. - Error will disappear when power is supplied again.
8	8	Failure of auto flush movement. Lead switch sensed when the water is flushed and the lead switch does not turn off within 30 seconds.	- All the functions will stop. Error will be displayed. - Error will disappear when power is supplied again.