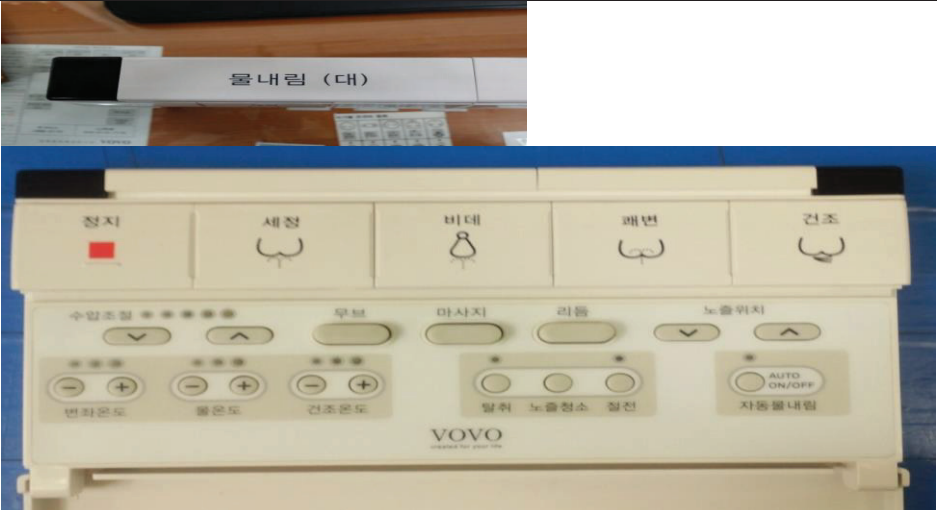
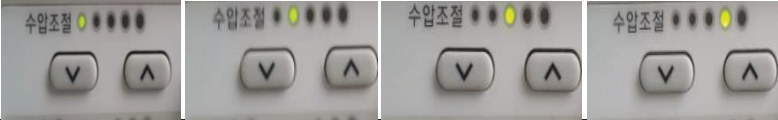
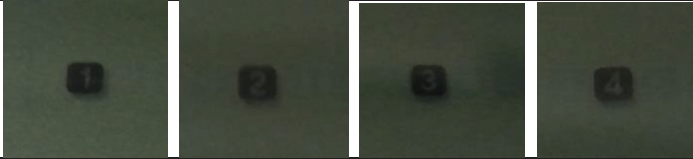
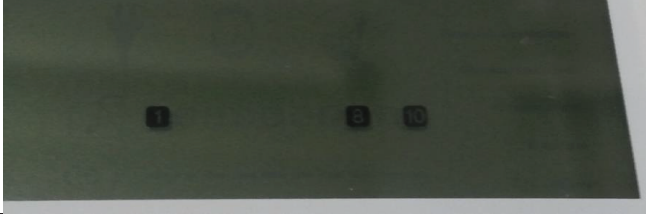
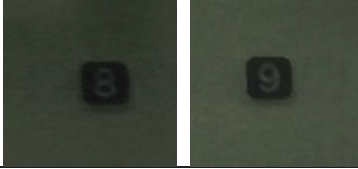


Prince / King 080 TCB Series ID/FLUSHING MODE/MODEL

Setting Mode	Pressing 4 buttons together : Seat Temp v + Plusating + Rhythm + Position V 
ID Change	4 types ID , Water Pressure LED : 1 from left – A , 2-B, 3-C, 4- D Nozzle position ^ button 
Flushing Mode Change	Normal Mode : Big 18.5 sec / Small 13.5 sec Big Mode : Big 26.5 sec / Small 19 sec Pressing STOP button to change mode – Water temp 1 is ON/OFF 
Model Display	Seat Temp LED shows Model OXX : 050 / XOX : 080 / OOX: Hayatt / XXO : SY / OXO ;KL...etc Pressing Wash button to change mode 
Sample of setting (e.g)	ID : Water Pressure LED 2 - B type MODEL : Seat Temp LED XOX - 080 Flushing : Water temp 1 ON - BIG Flushing 
Finalize Program	Pressing 4 buttons together : Seat Temp v + Plusating + Rhythm + Position V

Princess 707 PB Series ID/FLUSHING MODE/MODEL

Setting Mode	Pressing Water Pressure ^ + Nozzle ^ + Nozzle cleaning together 
ID Change	4 types ID , Number : 1 – A , 2-B, 3-C, 4- D Nozzle position v button 
Flushing Display Mode Change	Normal Mode : Big 18.5 sec / Small 13.5 sec Big Mode : Big 26.5 sec / Small 19 sec Pressing STOP button to change mode – Number 10 is ON/OFF 
Model Display	Number shoes Model 8 : 101 / 9: 707 Pressing Wash button to change mode 
Sample of setting (e.g)	ID : Number 1 - A type MODEL : Number 8 - 101 Flushing : Number 10 ON - BIG Flushing 